



title x

Version
1.6



USER MANUAL

E6GOLF.COM



CONTENTS

| | |
|---------------------------------------|-----------|
| GETTING STARTED Tittle X..... | 3. |
| Quick Start Guide | 3 |
| Install Tittle X App | 6 |
| Install E6Golf | 7 |
| Preparing Tittle X Device | 12 |
| Set up Bluetooth | 15 |
| Connect Tittle X App with E6Golf | 19 |
| Play golf with Tittle X | 20 |
| LED light guide | 22 |
| Controller guide | 23 |
| Trouble shooting | 24 |
| GETTING STARTED E6Golf..... | 29 |
| Launch E6Golf | 29 |
| Main Menu | 29 |
| STARTING A NEW ROUND..... | 30 |
| Play | 31 |
| Players | 31 |
| Courses | 32 |
| Golf Course List | 33 |
| Settings | 34 |
| Holes To Play | 35 |
| Modes of Play | 37 |
| Start | 37 |
| PLAYING A ROUND..... | 38 |
| On Screen Interface | 38 |
| E6 Menu | 39 |
| AIMING YOUR SHOT | 40 |
| SWING ANALYSIS: POST SHOT..... | 41 |
| PRACTICE..... | 42 |
| DRIVING RANGE | 43 |
| On Screen Interface | 43 |
| PRACTICE SESSION | 44 |
| Players | 44 |
| Sessions | 45 |
| Clubs | 45 |
| Shots | 46 |
| THE SCORING ZONE | 46 |
| CHIP & PUTT | 48 |
| ONLINE EVENTS..... | 49 |
| Players | 49 |
| Events | 49 |
| Start | 50 |
| CREATE EVENT..... | 50 |

QUICK START GUIDE

Mobile connection guide for
windows 7 & 8

! See detail user guide as <http://tittlegolf.com/userguide/>

"Win 10 & 8.1 user look at the Back"

1

 
Install Tittle X App



- ➔ From Apple App Store or Google Play, search for the app "Tittle X".
- ➔ Install the app on your smartphone.

2

Install E6Golf

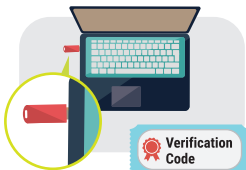

- ➔ Plug in the USB stick included in the Tittle X Air Golf Pack.
- ➔ Run E6_Full.exe and follow the instruction until the software is fully installed on your PC.
- ➔ Process authorization with included verification code.
(See detail <http://e6golf.com/tittle>)

3

Prepare Tittle X Device



- ➔ Wake up Tittle X device by plugging into a USB power source using the included USB charging cable.
- ➔ Mount Tittle X device onto the Swing Stick.
(See Device Quick Start Guide for detail instructions.)

4

Connect Tittle X Device with the App



- ➔ Start the Tittle X app.
(The app should automatically connect to Tittle X device.)
- ➔ Select E6Golf Simulator Icon.
(PC and Phone's wifi must be connected to the same router.)
- ! **IMPORTANT:**
Update latest device firmware on the Tittle X app.

5

 
Connect Tittle X App with E6Golf



- ! **IMPORTANT:**
Connect the PC and the smartphone to the same WiFi router.
- ➔ Start E6Golf on the PC.
- ➔ On Tittle X app, touch the E6 icon to connect the app to E6Golf.

6

Play!

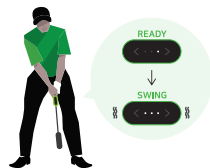

- ➔ In the E6Golf, start driving range or a round.
(See User Guide for details.)
- ➔ With the Swing Stick, assume the address position and hold until Tittle X device vibrates.
- ➔ Without wagging, begin your swing.

QUICK START GUIDE

 
PC direct connection guide for
windows 10 & 8.1

! See detail user guide as <http://tittlegolf.com/userguide/>

"Win 7 & 8 user look at the Back"

1


Install Tittle X PC App

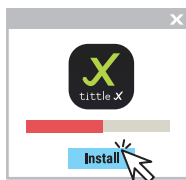

- ➔ Download Tittle X App from <http://tittlegolf.com/pc/>
(This file may be ground in the included USB stick.)
- ➔ Unzip and run setup.exe then a PC icon is created for Tittle X PC App.

2

 Install E6Golf

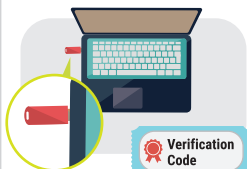

- ➔ Plug in the USB stick included in the Tittle X Air Golf Pack.
- ➔ Run E6_Full.exe and follow the instruction until the software is fully installed on your PC.
- ➔ Process authorization with included verification code.
(See detail <http://e6golf.com/tittle>)

3

 
Prepare Tittle X Device



- ➔ Wake up Tittle X device by plugging into a USB power source using the included USB charging cable.
- ➔ Mount Tittle X device onto the Swing Stick.
(See Device Quick Start Guide for detail instructions.)

4

Set up bluetooth

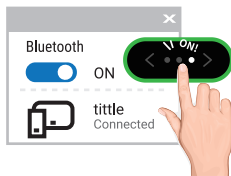

- ➔ Make sure your bluetooth is turned on in your PC.
- ➔ Tap Tittle X device to wake up the display.
- ➔ Go to Settings > Bluetooth in windows and pair with "tittle"
- ! **IMPORTANT:**
Install a bluetooth dongle if your PC has no bluetooth internally.

5

 
Connect Tittle X App with E6Golf




- ➔ Run Tittle X PC App.
(Tittle X device connects automatically by bluetooth.)
- ➔ Click the "E6 Start" button to start E6Golf.
(Use ALT+Tab to toggle between E6Golf and Tittle X PC App.)


6

Play!

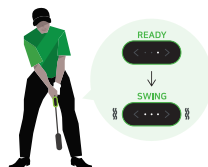

- ➔ In the E6Golf, start driving range or a round.
(See User Guide for detail.)
- ➔ With the Swing Stick, assume the address position and hold until Tittle X device vibrates.
- ➔ Without waggling, begin your swing.

 Search "Tittle X" on Youtube 

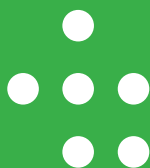

tittle X

User Guide

for E6 Golf Edition



Install Tittle X App

STEP 1

Tittle X PC App Download

1. Download Tittle X PC App from <http://tittlegolf.com/pc/>
2. Unzip and run 'setup.exe' then a PC icon is created for Tittle X PC APP



NOTICE

PC App is not supported to Windows 7&8 Users and must be connected by mobile Tittle X App. see detailed user guide at <http://tittlegolf.com/userguide/>



Install E6Golf

STEP 2

E6Golf Software Download_01

Access on <https://e6golf.com/tittle>, please click DOWNLOAD to receive the installation file.

The screenshot shows the E6Golf website interface. At the top, there is a navigation bar with the E6 logo on the left and links for 'E6 CONNECT', 'E6GOLF', 'SUPPORT', 'MY ACCOUNT', and a shopping cart icon on the right. The main content area has a dark background with the heading 'STEP ONE: DOWNLOAD' in yellow. Below this, it says 'DOWNLOADING AND AUTHORIZING YOUR COPY OF E6GOLF WILL REQUIRE A FEW SIMPLE STEPS.' and provides instructions on how to proceed. A warning box titled 'E6GOLF 1.6 DOWNLOAD' contains a download icon, a warning about the large file size (8.5 GB), and a 'DOWNLOAD' button. A green mouse cursor is pointing at the 'DOWNLOAD' button.

E6GOLF 1.6 DOWNLOAD

WARNING: LARGE DOWNLOAD

8.5 GB Zip File - At 24 Mbps it would take 50 minutes 42 seconds to download 8.5 Gigabytes at 2.86 MB/sec
Large zip files **WILL NOT** extract on Windows XP due to file size limitations of their Operating System.

[Need help Extracting and installing this file?](#)

DOWNLOAD

 


Install E6Golf

STEP 2

E6Golf Software Download_02

1. Execute E6_Full.exe
2. Click NEXT button
3. Select "Tittle" in the select manufacturer dropdown menu and click Next

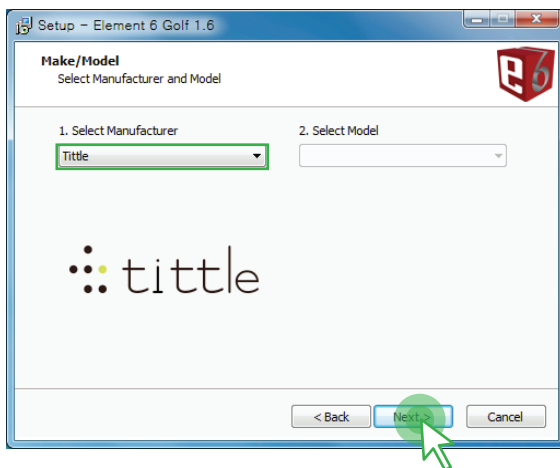





Install E6Golf

STEP 2

E6Golf Software Download_03

 4. The user sees all progress dialog box.

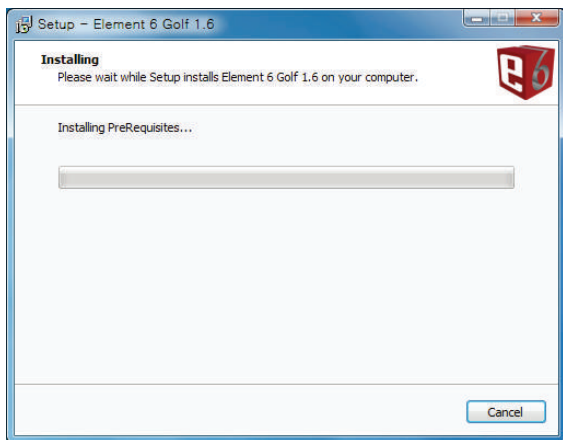

5. E6Golf  icon appears when installation is complete.

Element 6
Golf 1.6

 


Install E6Golf

STEP 2

E6Golf Software Authorization_01

1. Execute E6golf Program on the desktop.
2. Select OTHER > E6 Info.
3. Simulator ID will be displayed on this E6golf information page.

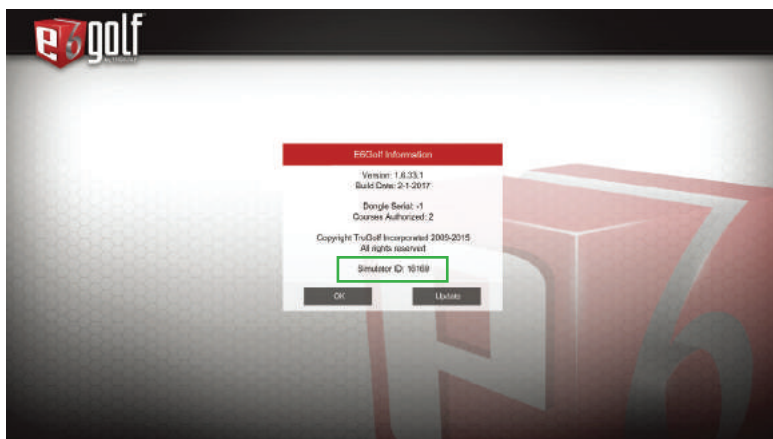




Install E6Golf

STEP 2

E6Golf Software Authorization_02

 4. Access on <https://e6golf.com/TITTLE/AUTHORIZATION/> and input "**NAME, EMAIL, VERIFICATION CODE AND SIMULATOR ID**" and then click **SUBMIT** button it will be automatically approved by TruGolf within a maximum of 3 business days and then you can view the available golf courses. At this time you can use one golf course for free.

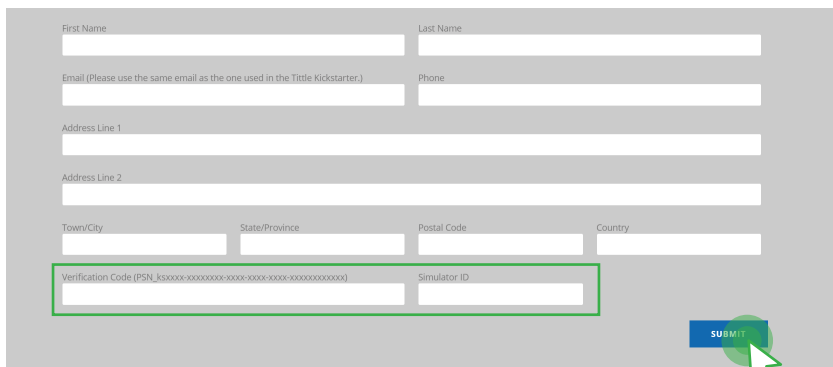

The form is a software authorization page for E6Golf. It contains several input fields for user information. The fields are arranged in a structured layout with labels above each input area. A green box highlights the 'Verification Code' and 'Simulator ID' fields. A blue 'SUBMIT' button is located at the bottom right, with a green mouse cursor icon pointing at it.

| | | | |
|---|----------------|---------------|---------------|
| First Name | | Last Name | |
| [Input Field] | | [Input Field] | |
| Email (Please use the same email as the one used in the Title Kickstarter.) | | Phone | |
| [Input Field] | | [Input Field] | |
| Address Line 1 | | | |
| [Input Field] | | | |
| Address Line 2 | | | |
| [Input Field] | | | |
| Town/City | State/Province | Postal Code | Country |
| [Input Field] | [Input Field] | [Input Field] | [Input Field] |
| Verification Code (PSN_Isxxxx-xxxxxxxx-xxxx-xxxx-xxxxxxxxxxxx) | | Simulator ID | |
| [Input Field] | | [Input Field] | |

SUBMIT



 
Preparing Tittle X Device

STEP 3

Attach a cradle onto the swing stick or your golf clubs

Attach each cradle to the swing stick or your golf clubs.

Please attach the cradle on the skinnier part of the shaft and push it upwards into the grip of the club.

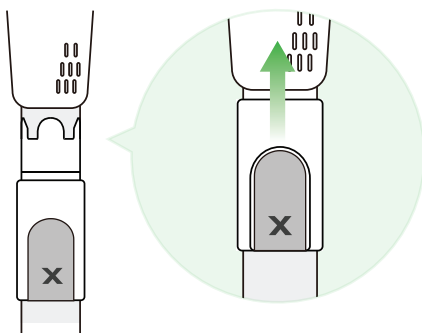


Preparing Tittle X Device

STEP 3

Insert Tittle X onto the cradle

 Align the marked Tittle X symbol to the cradle outline and insert until you hear a clicking sound.

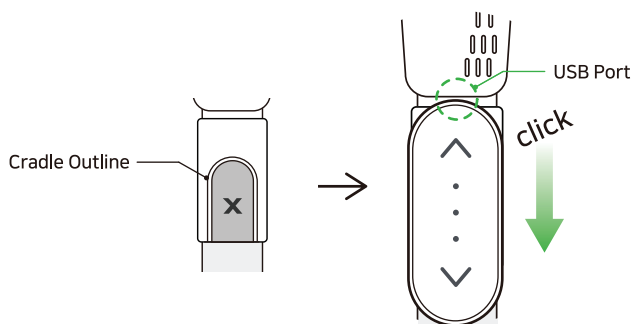

Once you attach and power on the device it will automatically recognize the club and enter the Swing Mode. If Tittle X connects with golf simulator software, 'LED lights' sign for Swing Mode will be displayed.

 
* For more details on LED Signs, check the back page.

Preparing Tittle X Device

STEP 3

Power up Tittle X

Power up by tapping on the display twice or moving lightly.
When Tittle X is not used for over 10 minutes it will automatically go into sleep mode.

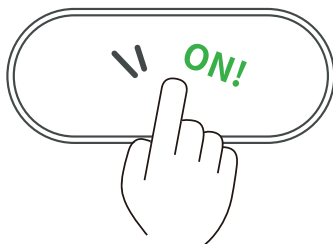

Please Check !

Tittle X is delivered to you in sleep mode.
Wake up Tittle X by connecting it to a power source using the included charging cable.

 
 


Set up Bluetooth

STEP 4

When using the built-in Bluetooth_01

1. Make sure your Bluetooth device is turned on in your computer.
2. Tap the Tittle device to turn it on.
3. Pair with “tittle” found in Setting > Bluetooth in windows menu.

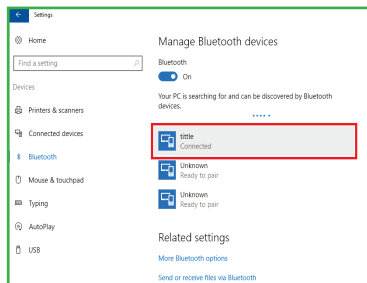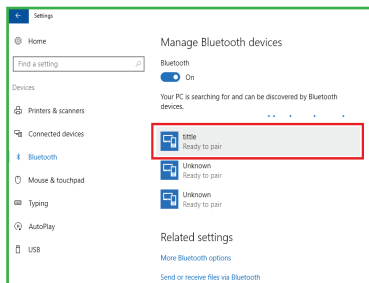




Set up Bluetooth

STEP 4

When using the built-in Bluetooth_02

 4. When installation is complete, run the Tittle X PC App using the Tittle X icon on your desktop. Verify “Connected” in Connection Status and press “Start” button to launch the E6Golf program automatically.

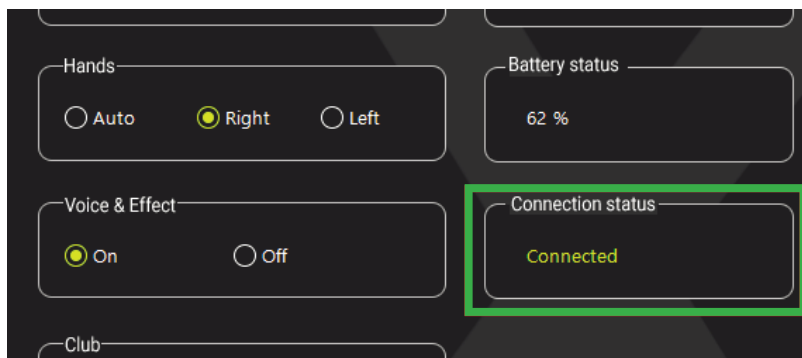




Set up Bluetooth

STEP 4

Check the pairing status.

If the connection succeeds, the blinking red LED lights of the device turns white and you can hear the voice “Device connected”.

 Once Tittle is paired with E6 Connect, it will automatically be connected.

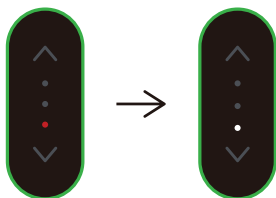

PC APP VOICE GUIDE

| | |
|------------------------|--|
| Connection successful! | “Device connected” |
| Address position | “Ready” |
| After swing | “The distance to the pin is ____ meters (yards)” |

Set up Bluetooth

 
STEP 4

When using the external Bluetooth dongle

1. If you insert the Bluetooth dongle into the USB port, it will be installed automatically by Windows 10 or Windows 8.1.

NOTICE

Never install the Bluetooth dongle by running the program on the installation CD or downloading it from the Internet.

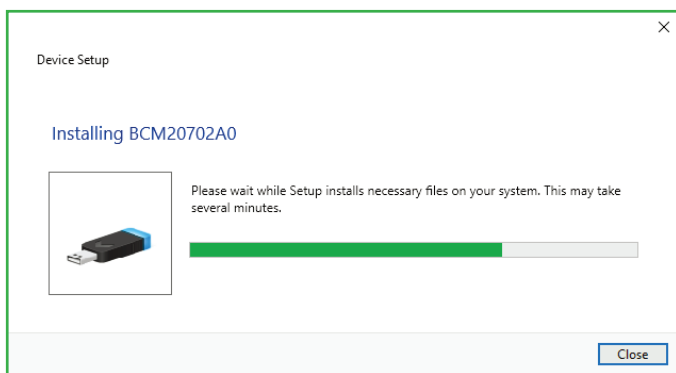

Then follow the same procedure from STEP4 of “When using the built-in Bluetooth 01”

 


Connect Tittle X App with E6Golf

STEP 5

Start

1. Run Tittle X PC App.
2. Click the “E6 Start” button to start E6Golf.
3. Select Play Mode.

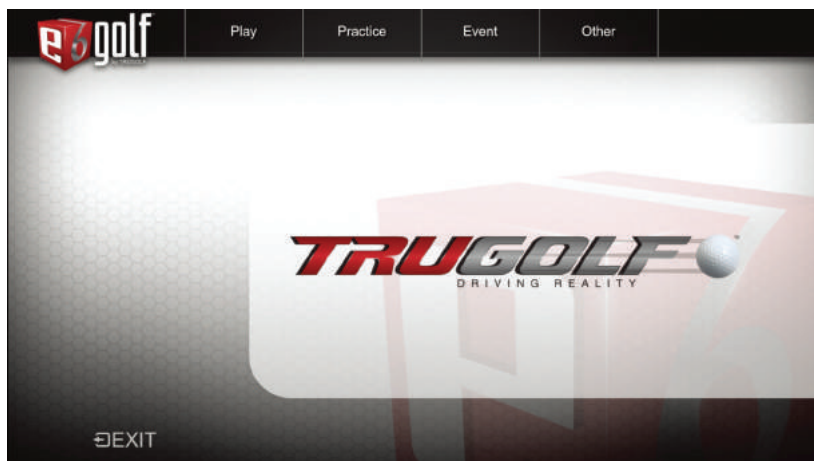





Play golf with Tittle X

STEP 6

Swing

  Maintain the address position until Tittle X vibrates, alerting you that the Ready Mode has switched to the Swing Mode. At this point, you can begin your swing.

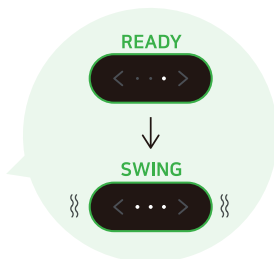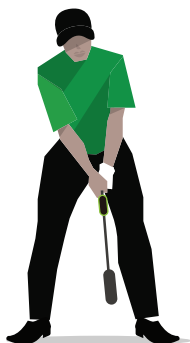

* In swing mode, the three led lights are turned on repeatedly in order.

Please Check !

After entering the Swing Mode, if you waggle or make other movements, a false swing is registered. Therefore, after entering the Swing Mode, try to swing as immediately as possible.

Play golf with Tittle X

STEP 7

Check the swing data on the screen

When you swing, the ball will fly on the screen and the Swing Analysis screen will be displayed.





 
LED light guide



SWING MODE

Three white LED lights are turned on in sequence and repeated until the swing is over.

When entering swing mode, vibration once with LED light animation.



POWER ON

LED lights are animated twice.

The device is ON when it is moved.
The device is OFF when it doesn't move for 5 sec.



LOW BATTERY

The third red LED light flickers 3 times.



FIRMWARE UPDATE

The third red LED light is on.



DISCONNECT

Red LED light flickers.

 


CONNECT

White LED light flickers.

※ In the figure above, the direction of the charging terminal is at the bottom of the device.

Controller guide

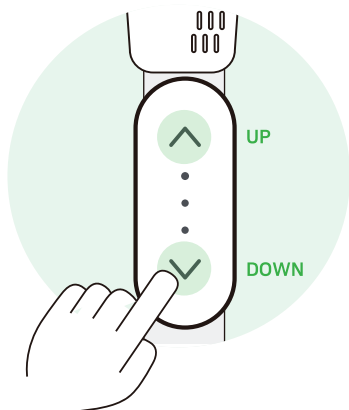

In the tee box & fairway

Club selection

You can change the club with touching the up and down controller. You can see the changed club by the screen and sound of PC.

On the green (to be supported)

Changing direction

You can change the aiming direction for putting.

 
For further details,
please search "Tittle X Manual" on our website!



Trouble shooting

Disconnected symptom between Tittle X and PC

If the Tittle X connection does not work well after the Tittle X device is paired, delete the “tittle” device from the Bluetooth Settings and pair it again.

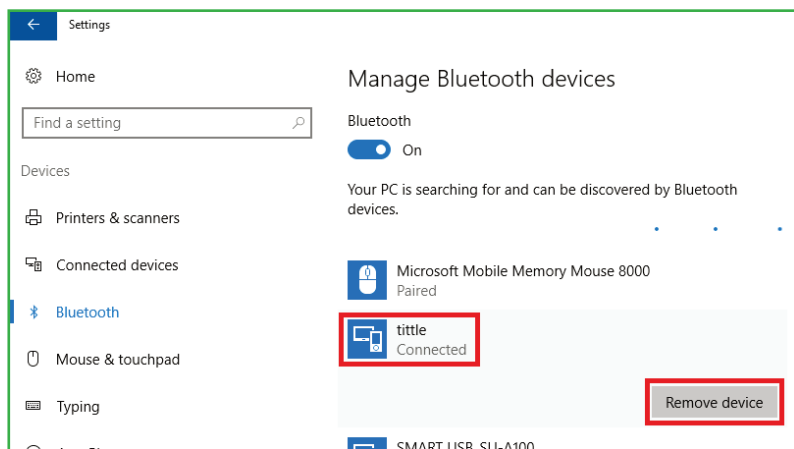


Trouble shooting

You may need to install a Bluetooth dongle under these circumstances

- If your PC doesn't have a Bluetooth device
- If the Bluetooth that's included with your PC has a signal range so narrow that, in order to maintain connection, the Tittle X device requires you to be at a distance unsafe to swing.

If you already have a built-in Bluetooth device in your PC and need to install a new Bluetooth dongle because the Bluetooth signal range in your PC is narrow, you have to set the built-in Bluetooth device to "Disable" in

 "Settings > System > About > Device Manager > Bluetooth"

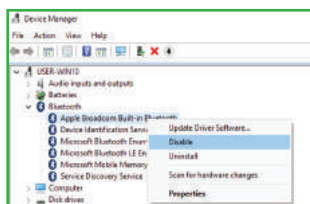

NOTICE

If you already have a Bluetooth dongle installed on your PC, you must first delete the program that was installed via the CD or Internet program provided with your Bluetooth dongle. Then you must unplug the Bluetooth dongle and reboot your PC and insert the Bluetooth dongle again and install it automatically on Windows.



Caution and Warning

Usage & Liabilities

- Before first use, check the battery life status.
- Do not use the product for purposes other than its intended functions.
- Do not separate and disassemble the product.
- Do not subject the product to severe impact, such as one caused by a drop.
- Do not use unauthorized components.
- We hold no liability for information that may leak from Bluetooth communications.
- We hold no liability for damage to clubs such as scratches, spots, etc.
- Do not expose the product to severe temperature or humidity.
- Ensure there are no nearby obstacles or people when you swing.
- Remove device from the cradle after use.
- Do not use on a hard surface such as concrete or asphalt.
- Be careful not to damage your club grip when installing the cradle.

App download

Install Tittle X app on your smartphone.

For updating device firmware and A/S contact, it is required to download the app in your smartphone. Since both iOS and Android OS are supported, it is easy to search and install 'Tittle X' from App Store.

* The application and the download path may differ depending on the region or country.

Free download





Warranty and A/S

- One year warranty from the date of original retail purchase.
*No warranty against damages or loss caused by accident, abuse, or natural disasters.
- For support, please contact the following email : sales@ulike.co.kr
- For more details, check the Website : **tittlegolf.com**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with RF exposure requirement.




E6Golf GUIDE



GETTING STARTED

LAUNCH E6GOLF

Launch E6Golf from the Windows start menu or from the  icon on the desktop.

MAIN MENU

Navigate the MAIN MENU by TAPPING any of the following menu options:

PLAY - Start or resume a round or event.

1. NEW ROUND - Start a new round of golf.
2. RESUME ROUND - Resume a previously play round of golf.

PRACTICE -

 
1. DRIVING RANGE
2. PRACTICE SESSION
3. SCORING ZONE
4. CHIP & PUTT

EVENTS - Connect to Online Events

OTHER -

1. INFO - Information about E6GOLF Software, including version number & dongle serial#.
2. SAVE DEFAULTS - Save the current configuration as default.

EXIT - Exit E6GOLF

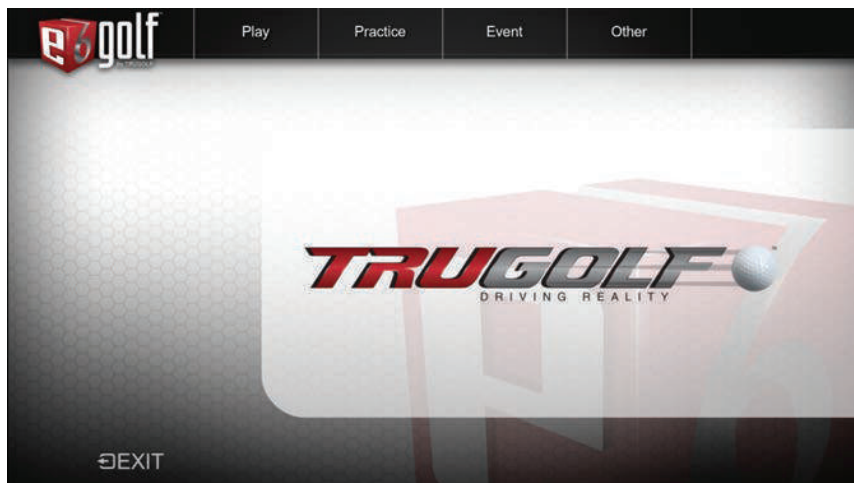

STARTING A NEW ROUND

PLAY

From the Main Menu select **PLAY**. The following sub menu items are available:

- PLAYERS** - Add Players to a round
- COURSES** - Select the desired course to play
- SETTINGS** - Set conditions and round options
- HOLES TO PLAY** - Set the desired holes to play
- MODES OF PLAY** - Select from 36 different styles of play
- PREVIOUS MENU** ↩ - Return to the previous menu

PLAYERS

 
1. To add players **SELECT** one of the following options:

LOGIN - If you already have created a Profile.

CREATE - Create a Profile. A Player Profile is required to track your stats online and to compete in online events.

GUEST - Play *without* creating a profile. Stats are not tracked. Guests *cannot* compete in online events.

2. **CLICK** to **SET** the desired **PROFILE IMAGE**, **NAME**, **COUNTRY**, **TEE**, **HANDICAP**, **HAND**, or **BOOST**.
3. To **REMOVE** a player **TAP** the **LOG OUT** icon on the right.

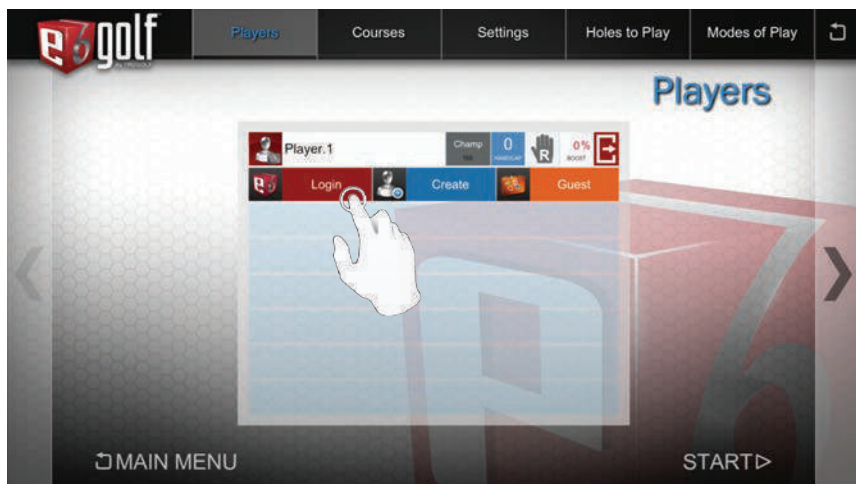




COURSES

Navigate to the COURSES screen



 NOTE: There are multiple ways to navigate between screens: tap menu items, tap directional arrows, or swipe in a horizontal direction.

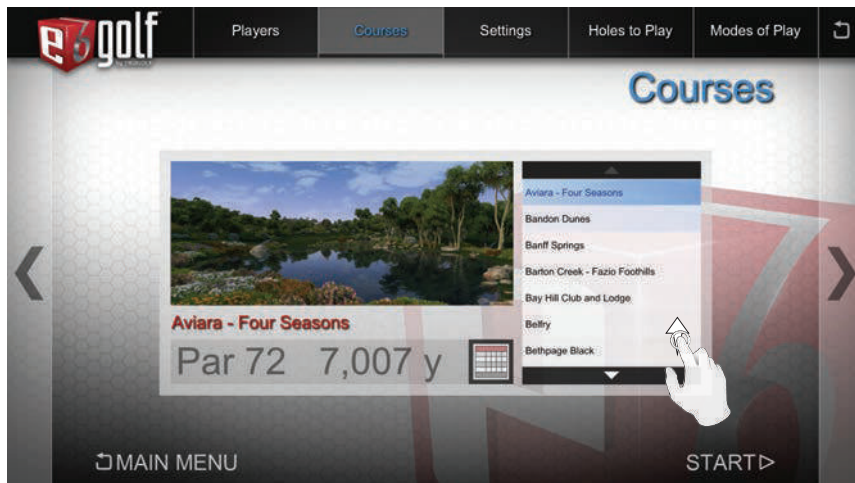

1. VERTICAL SWIPE or TAP the UP/DOWN ARROW buttons to browse the COURSE LIST.
2. TAP the desired course to SELECT.



Score Card Button - TAP to view the course scorecard

GOLF COURSE LIST

0

STANDARD COURSE PACK

Banff Springs Resort
Bay Hill Club & Lodge
The Belfry
Bountiful Golf Club
Castle Pines Golf Club
Firestone Country Club
Harbour Town Golf Links
Mauna Kea Resort
Par Three Ocean
Par Three Mountain
Gleneagles Golf Club
Pinehurst Country Club #2
Bethpage Black
Torrey Pines Golf Club
Troon North Golf Club

1

COURSE PACK ONE

Barton Creek
Big Horn
Big Horn Canyons
Cog Hill
Covered Bridge
Devil's Island
Dorado Beach
Emerald Dunes
Latrobe
Sea Island
Kiawah Island
The Tribute at Otsego Club

2

COURSE PACK TWO

Entrada at Snow Canyon
Hapuna
Innisbrook Copperhead
Kapalua Bay
Kapalua Plantation
Kapalua Village
Pelican Hill
Pinehurst Country Club #8
Prairie Dunes
Phoenix Country Club
Three Canyons
Valderrama

3

COURSE PACK THREE

Aviara Resort
Auburn Grand National RTJ
Chateau Whistler
Frankfurter
Mauna Lani
Oakmont Country Club
Princeville
Royal Melbourne
The Judge Capitol Hill RTJ
Stone Canyon
Thanksgiving Point
Westfields

4

COURSE PACK FOUR

Cabo del Sol
Cambrian Ridge RTJ
Gallery North
Greywolf
Kauri Cliffs
King & the Bear
Loch Lomond
New South Wales
Pacific Rim
Raven at South Mtn
Skeleton Coast
Superstition Mountain

5

COURSE PACK FIVE

Le Grand George
Taghazout
Wade Hampton
Bandon Dunes
Pacific Dunes
Owl Creek
Lakeside
Silver Lakes - Heartbreaker RTJ
Silver Lakes - Mindbreaker RTJ
Silver Lakes - Backbreaker RTJ
Hokulia
Panther

6

INDIVIDUAL COURSES

Holtsmark Golf Club
Losby Golf Club
Golf Resort Kunētická Hora
Club de Golf Le Sorcier
Oslo Golf Club
PGA National

7

PEBBLE BEACH PACK

Pebble Beach® Golf Links*
The Links at Spanish Bay®
Spyglass Hill® Golf Course

8

ST ANDREWS PACK

St Andrews Old Course
St Andrews New Course
St Andrews Jubilee Course

 


SETTINGS

NAVIGATE to the SETTINGS screen

NOTE: There are multiple ways to navigate between screens: tap menu items, tap directional arrows, or swipe in a horizontal direction.

TAP ANY BUTTON TO CHANGE ITS DEFAULT SETTING

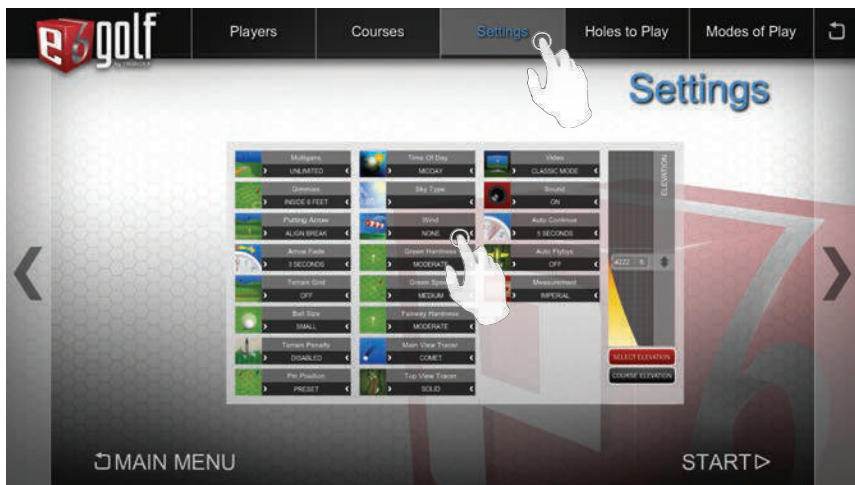

MULLIGANS - Mulligans are “do-overs” – re hit without penalty.

- Unlimited / None / 1 / 2 / 5 / 10

GIMMIE RANGE - Gimmie Range is the distance within which you automatically hole out with a one-putt.

- Inside 2 / 4 / 6 / 8 / 10 / feet
- Player Decides
- Computer Decides
- Auto score
- Player Putts Out

PUTTING ARROW - Shows the break and elevation changes between the ball and the hole. Red indicates downhill, Green indicates uphill.

- Off
- Play Break - Aligns the Player to the hole, regardless of break.
- Align Break - Aligns the Player in the direction of the break.

PUTTING ARROW FADE - Specifies how long the Putting Arrow will be displayed before fading away. Select Off to always display the Putting Arrow.

- Off / 3 / 5 / 7 / 10 / seconds

GRID - Overlays the terrain to highlight undulations and elevation changes.

- Off / Near Green / Always On

BALL SIZE - Changes the visibility of the golf ball.

- Small / Medium / Large

TERRAIN PENALTY - Imposes a spin modifier based on the grass type and location in the grass.

- Enabled / Disabled

PIN POSITIONS - 6 pin positions for each level of difficulty

- Preset / Easy / Medium / Hard



TIME OF DAY - *Changes the lighting schemes.*

- Morning
- Midday
- Afternoon
- Evening

SKY TYPE - *Changes the visual appearance of the sky.*

- Clear
- Partly Cloudy
- Cloudy
- Random

WIND - *Wind intensity effects ball flight*

- None
- Breezy
- Windy
- Strong

GREEN HARDNESS - *Amount of bounce the golf ball has on the green.*

- Soft
- Moderate
- Hard

GREEN SPEED - *Amount of roll the golf ball has on the green.*

- Slow
- Medium
- Fast

FAIRWAY HARDNESS - *Amount of bounce the golf ball has on the fairway.*

- Soft
- Moderate
- Hard

MAIN VIEW TRACER - *A tracer is a colored line that shows the flight of the ball.*

- Solid - *Tracers stay permanently visible*
- Comet - *Tracers fade away*
- Off

TOP VIEW TRACERS - *A tracer is a colored line that shows the flight of the ball.*

- Off / Solid

CAMERA

- Classic Mode - *camera does not follow the ball*
- Ball Mode - *Camera follows the ball*
- TV Mode - *Camera shows different views*

SOUND

- On / Off

AUTO CONTINUE - *The length of time before the game automatically continues after a shot.*

- Off / 3 / 5 / 7 / 10 / seconds

FLYBYS - *These are aerial previews of each new hole.*

- On / Off

MEASUREMENT

- Imperial - *yards / feet / inches*
- Metric - *meters / centimeters*

ELEVATION - *Set the desired elevation*

- Select Elevation - *Select the desired elevation*
- Course Elevation - *Play at the actual course elevation*

 
HOLES TO PLAY

NAVIGATE to the HOLES TO PLAY screen

NOTE: There are multiple ways to navigate between screens: tap menu items, tap directional arrows, or swipe in a horizontal direction.

1. By default all 18 holes have been selected to be played in order.
2. Tap **CLEAR** To choose any combination of holes.

HOLES CURRENTLY SELECTED - A red box indicates which hole(s) will be played and in which order. **PAR** is indicated in the Lower Right Corner. **PLAY ORDER** is displayed in the Upper Left Corner of the buttons.

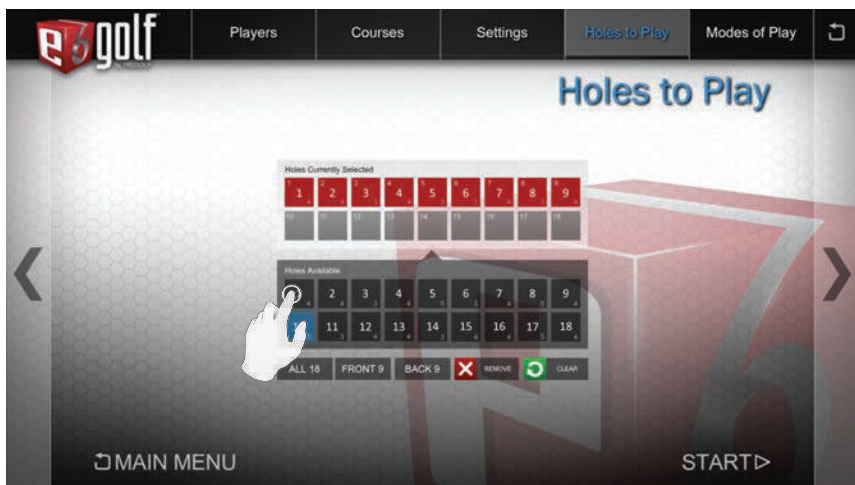

HOLES AVAILABLE - Will add hole to next available spot in Holes Currently Selected.

ALL 18 - Override Holes Currently Selected and play all 18 holes in the correct order.

FRONT 9 - Override Holes Currently Selected and play **ONLY** the front 9 from the chosen course.

BACK 9 - Override Holes Currently Selected and play **ONLY** the back 9 from the chosen course.

REMOVE - Removes the last hole from Holes Currently Selected window.

CLEAR - Clears ALL Holes Currently Selected.

 


MODES OF PLAY

NAVIGATE to the MODES OF PLAY screen

NOTE: There are multiple ways to navigate between screens: tap menu items, tap directional arrows, or swipe in a horizontal direction.

1. VERTICAL SWIPE or TAP the UP/DOWN ARROW buttons to browse the LIST.
2. TAP the desired Mode of Play to SELECT.

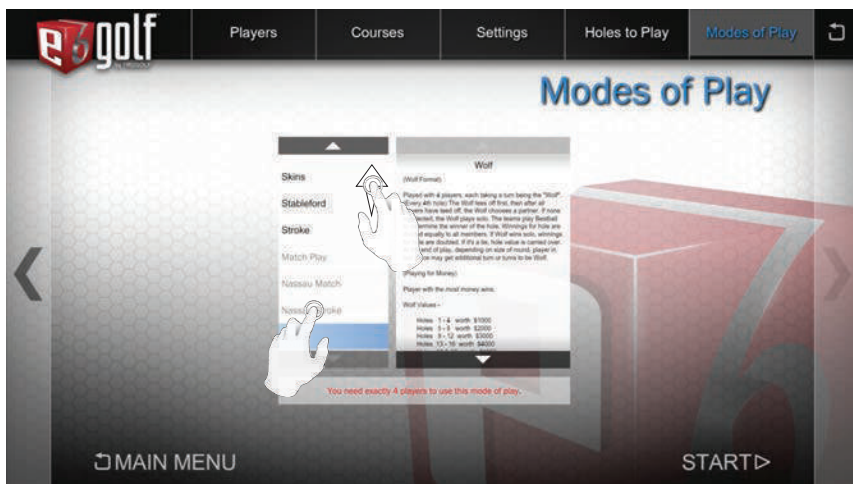

NOTE: Stroke is the standard mode of play. A description is displayed of the selected Mode.

START

Select **START** to begin the round or to make modifications SELECT any of the sub menu items.

PLAYERS - Add Players to a round

COURSES - Select the desired course to play

SETTINGS - Set conditions and round options

HOLES TO PLAY - Set the desired holes to play

 
MODES OF PLAY - Select from 36 different styles of play

PREVIOUS MENU ↶ - Return to the previous menu

PLAYING A ROUND ON SCREEN INTERFACE

USER INTERFACE:

- E6 Menu Button
- Information Box
 - Course Name
 - Hole
 - Par
 - Distance from the ball to the pin
 - Player Name
 - Scoring
 - Shot Number
 - Difference in Elevation between the ball and the pin
 - Tracking System Status
 - Wind speed and direction
 - Select Club (only available with some tracking systems)
- Hole Top view

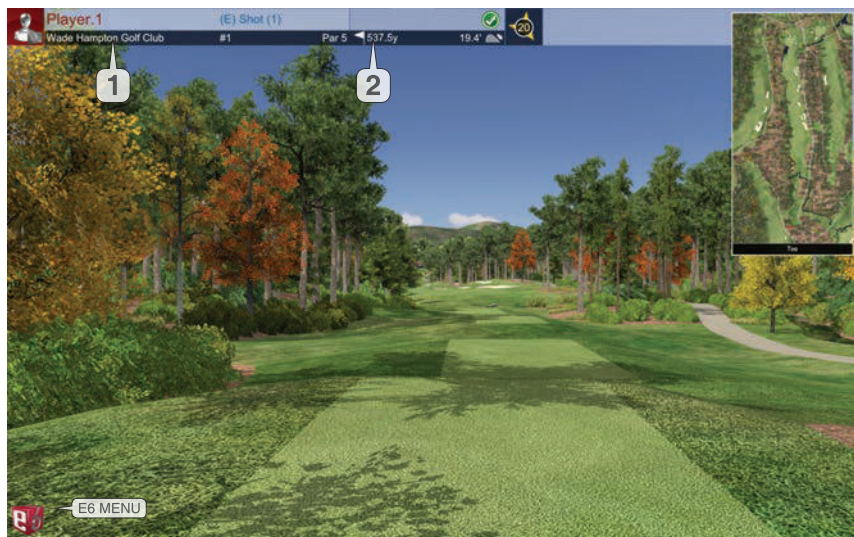

QUICK ACCESS BUTTONS

To access these features, touch/click the indicated area

1. View Scorecard
2. Spot Pin

E6 MENU



To access the in game menu Tab the **E6GOLF MENU ICON** in the **BOTTOM LEFT CORNER** while in **PLAY, PRACTICE OR EVENT MODES**.

ROUND MENU:

MULLIGAN: If available, undo the last shot.

REPLAY: Show a replay of the last shot.

SCORE CARD: Display the score card for the current round.

FLY BY: Show a fly by of the current hole.

NEXT HOLE: Advance ALL players to the next hole; all players receive a set score based on the mode of play.

GRID: On or Off

SPOT PIN: Close-up view of pin location

EXIT CURRENT ROUND: Exit Round

 
DIAGNOSTICS: Assists in troubleshooting tracking system

MORE: More Round Settings

IN-ROUND PRACTICE: Enter Practice Mode while in-round

MODE OF PLAY RULES: Displays rules for current Mode

BACK: Return to the E6 Menu

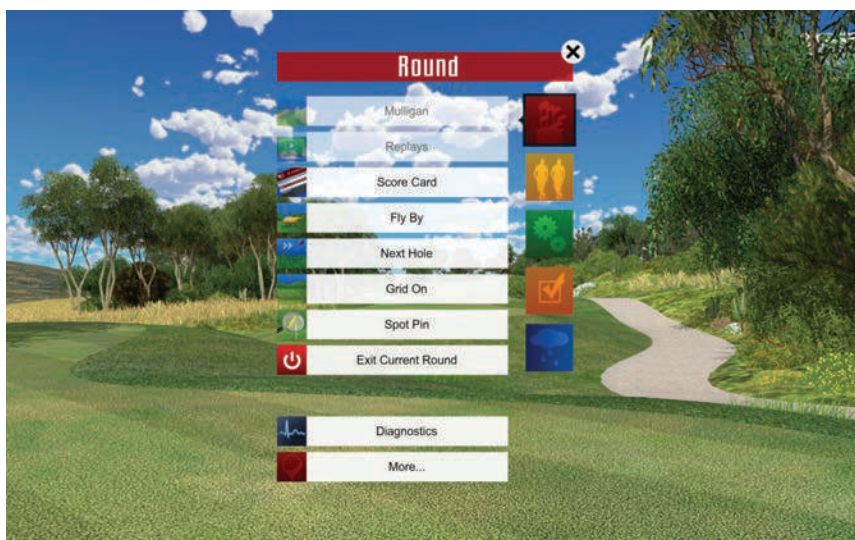

PLAYER MENU:

DROP: Drop the ball.

PICK UP: Advance the current player to the next hole and receive a set score based on the mode of play.

CONCEDE: Concede the hole.

NOTE: This option is only available in certain modes of play, such as Match Play.



BOOST: Boost your hitting power.

BACK: Return to the E6 Menu.

MANAGE PLAYERS: Add, remove, or change settings of a players

MORE: More Player Menu settings.

STATS: Current Round Stats

LIFETIME STATS: Lifetime stats for a Player (must be logged in).

SKIP OPTIONS:

SKIP PLAYER ONCE: Skip the current Player one time.

SKIP PLAYER TILL END OF HOLE: Allow all other Players to finish the hole before the current Player hits again.

SKIP PLAYER TILL END OF ORDER: Allow all other Players to hit before the current Player.

SKIP TEAM ONCE: Same as Skip Player Once (above) in a Team mode of play.

SKIP TEAM TILL END OF HOLE: See above.

BACK: Return to the E6 Menu.

OPTIONS MENU:

CAMERA MODE: Classic, Ball, or TV Mode

SOUND: On or Off

AUTO CONTINUE: The length of time before the game automatically continues after a shot.

MAIN VIEW TRACERS: Solid, Comet, or Off

TOP VIEW TRACERS: Solid or No Tracer

AUTO FLY BY: These are aerial previews of each new hole. Select On or Off

MEASUREMENT: Imperial or Metric

SETTINGS MENU:

GIMMIES: Select the number of gimmies.

PUTT ARROW: Select Off, Play Break, Align Break

PUTT ARROW FADE: This is the length of time the Putt Arrow is on screen.

GRID: Select On Green, Always On, Always Off

BALL SIZE: Select Small, Medium, or Large

ELEVATION: Select Course Elevation to play the course at its actual elevation or Select Elevation and move the slider.

CONDITIONS MENU:

GREEN SPEEDS: Select Slow, Medium, or Fast

GREENS HARDNESS: Select Soft, Moderate, or Hard

FAIRWAYS HARDNESS: Select Soft, Moderate, or Hard

TERRAIN PENALTY: Enable or Disable

Note: The Terrain Penalty feature allows you to turn the affects of taller grass on your ball ON or OFF.

WEATHER: Select Clear, Partly Cloudy, Cloudy, or Random

WIND: Select No, Breezy, Windy, Strong Wind

NOTE: Wind Speed and Wind Direction can both be specified in more detail in Practice.

TIME OF DAY: Change the time of day. This will dramatically change the lighting on the course.

CLOSE BUTTON: Press Close to take you back to the round.

AIMING YOUR SHOT

You are automatically aimed at either the center of the fairway or the pin, whichever is appropriate. To adjust the direction you are aimed:

1. Click or touch the terrain either on the course or in the Top View window to display the red and white striped AIM MARKER.
2. Drag the AIM MARKER to where you want to aim.
3. Select the CHECK MARK button.
4. To cancel the alignment choice, select CANCEL (X).



To reset the aim toward the pin or center of the fairway, display the Aim Marker and then select the RESET button.



Toggles between viewing the Aim Marker from the direction of the Ball or Flag.



Zooms the view closer to or farther from the Aim Marker. *You can move the slider to zoom in or out.*

SWING ANALYSIS: POST SHOT

After a shot, a variety of options are displayed:

CONTINUE: Accept the shot and continue.

NOTE: By default, if the ball is in play, CONTINUE is automatically selected after five seconds. To change this setting go to Options Menu (see Options Menu page 8).

MULLIGAN: If available, select to rehit without penalty.

PENALTY REHIT: If available, select to rehit with a penalty.

NOTE: This is available only after the ball is hit out of play. The errant shot counts for one stroke and there is a one-stroke penalty.

PICKUP: Advance to the next hole and receive a set score dependent on the mode of play.

DROP: If available, drop the ball in the best allowable location.

NOTE: This is available only after the ball is hit out of play and only if there is an acceptable drop location. The errant shot counts for one stroke and there is a one-stroke penalty.



REPLAYS:

 
 
1. TV: Show a replay of the shot from several different views.
2. BALL CAM: Show a replay following the ball flight.
3. FORWARD: Show a replay from the golfer's perspective.
4. REVERSE: Show a replay from where the ball came to rest.



PRACTICE

From the MAIN MENU Select **PRACTICE** then select one of the following options:

1. DRIVING RANGE
2. PRACTICE SESSION
3. SCORING ZONE
4. CHIP & PUTT

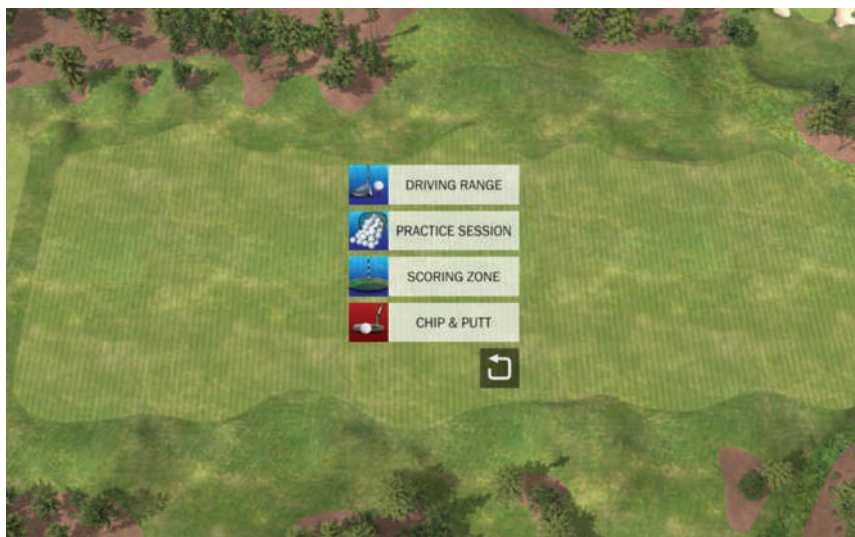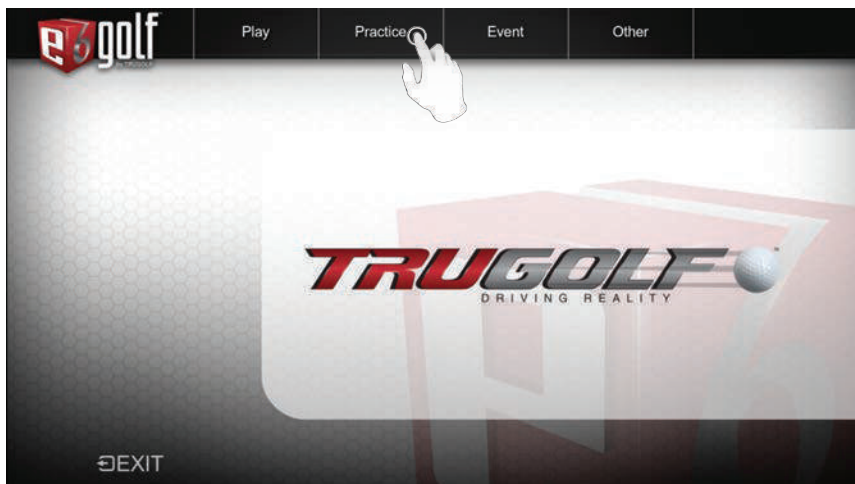



DRIVING RANGE

 
1. From the Main Menu, select **PRACTICE** and then **DRIVING RANGE**.
-OR-
From the Practice Area, click or touch the **E6 Cube**.
2. Select **CHOOSE PRACTICE AREA**.
3. Select **DRIVING RANGE**.

ON SCREEN INTERFACE

SHOT STATISTICS

- TOTAL: Total distance of shot(s)
- CARRY: Distance of shot(s) in air
- LAUNCH: Shot angle
- MPH: Ball speed
- TO TARGET: Distance from target
- DEVIATION ANGLE/DISTANCE: Consistency of shots
- DISPERSION: Tracks the spread of multiple shots.
- SPIN: Ball Spin (available with some tracking systems)

IMPORTANT: The Shot Statistics Box also has a drop-down menu which is opened by clicking the arrow at the bottom of the box.

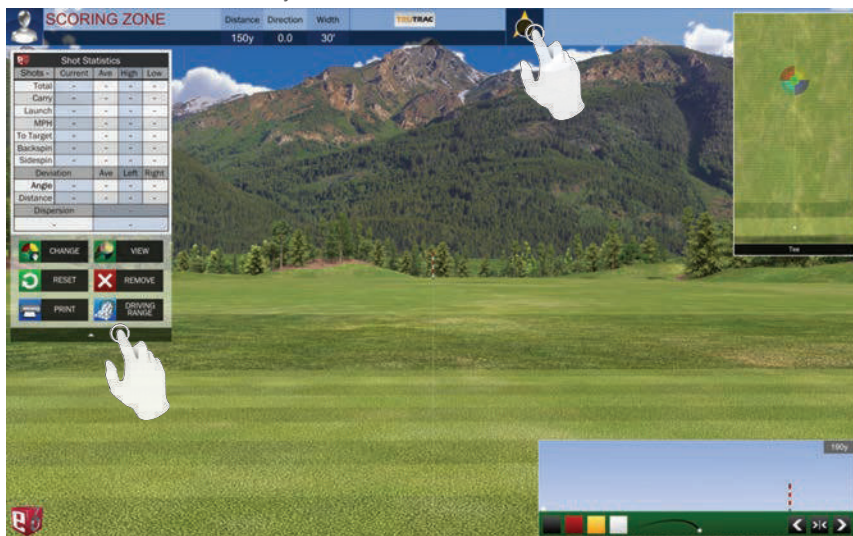

WIND GAUGE

1. Click or touch the **WIND GAUGE** to adjust the wind settings.
2. Click or touch the perimeter of the Wind Gauge to change the wind direction.
3. Drag the attachment on the right up or down to change the wind speed.
4. Select the **Check mark** button to accept the new settings; select the **X** button to cancel.

Note: The wind can only be adjusted in Practice, and not during regular golf play.



SHOT PROFILE VIEW

- Select a color button to have your shot(s) leave a tracer of that color. This is useful for comparing shots.
- Select the arrow buttons to increase or decrease the area displayed in the TOP VIEW & SHOT PROFILE; select the double arrow button to reset.

CLEAR SHOT STATISTICS

1. Click the arrow at the bottom of the Shot Statistics box to open the drop-down menu.
2. Select **RESET** to clear all shots –OR– select **REMOVE** to clear only the last shot.

PRACTICE SESSION

Practice sessions are a way to practice inside E6 and store all of your data in the cloud. Add clubs to your bag and track the performance of each over time. Analyze how your practice is affecting your game. You can also compare clubs to each to see which is the best one for you or your student.

1. From the Main Menu, select **PRACTICE** and then **PRACTICE SESSION**.

–OR–

From the Practice Area, click or touch the **E6 Cube**.

2. Select **CHOOSE PRACTICE AREA**.
3. Select **PRACTICE SESSION**.

 
PLAYERS

1. To add players SELECT one of the following options:

LOGIN - If you already have created a Profile.

CREATE - Create a Profile. A Player Profile is required to track your stats online and to compete in online events.

2. ADD additional Players (8 players max)
3. To REMOVE a player TAP the LOG OUT icon.

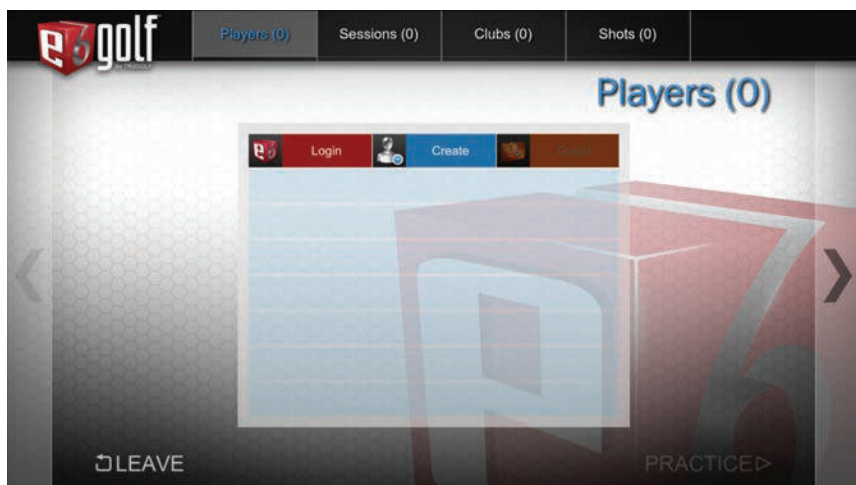


SESSIONS

NAVIGATE to the SESSIONS screen

NOTE: There are multiple ways to navigate between screens: tap menu items, tap directional arrows, or swipe in a horizontal direction.

 1. VERTICAL SWIPE or TAP the UP/DOWN ARROW buttons to browse the LIST.
2. TAP the desired Practice Session to SELECT.
 - SELECT **ADD** to create a new PRACTICE SESSION.
 - SELECT **EDIT** to modify an existing PRACTICE SESSION.
 - SELECT **REMOVE** to delete a PRACTICE SESSION.

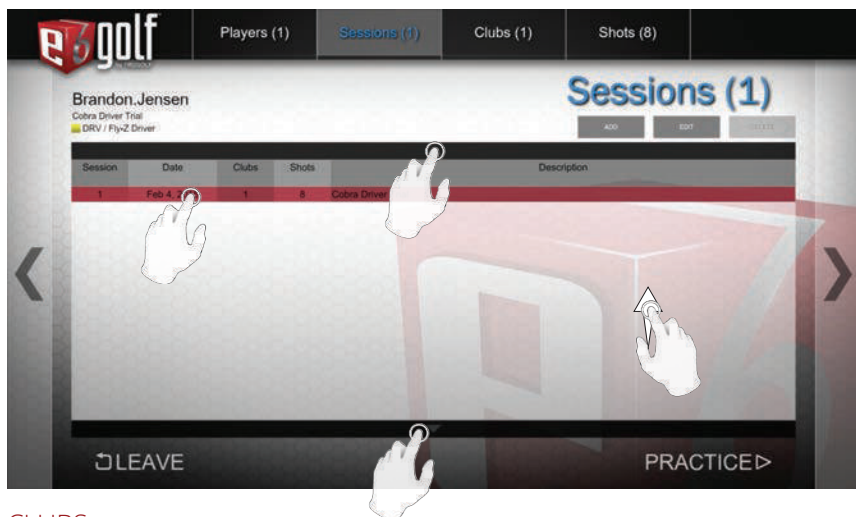

CLUBS

NAVIGATE to the CLUBS screen

NOTE: There are multiple ways to navigate between screens: tap menu items, tap directional arrows, or swipe in a horizontal direction.

1. SELECT **ADD** to add a CLUB to the Practice Session.
2. SELECT **EDIT** to modify a CLUB.
3. SELECT **COPY** to duplicate a CLUB.
4. SELECT **REMOVE** to delete the selected CLUB.

ADD/EDIT CLUB

MODIFY any of the below options when you ADD or EDIT a CLUB

- Name
- Manufacturer
- Model
- Club Type
- Shaft Type
- Shaft Flex
- Loft
- Lie
- Color Swatch



SHOTS

NAVIGATE to the SHOTS screen

NOTE: There are multiple ways to navigate between screens: tap menu items, tap directional arrows, or swipe in a horizontal direction.

1. VERTICAL SWIPE or TAP the UP/DOWN ARROW buttons to browse the LIST.
2. TAP the desired Practice Session to SELECT.
 - SELECT **DISPLAY** to view the POST SHOT ANALYSIS
 - SELECT **DELETE** to remove a SHOT.

Brandon Jensen
Cobra Driver Trial - Testing out the new Cobra Fly-Z Driver
DRV / Fly-Z Driver

Shots (16)

| Shot | Distance (yards) | Carry (yards) | Ball Speed (mph) | Club Speed (mph) | Launch Angle (degrees) | Club Path (degrees) | Back Spin (rpm) | Side Spin (rpm) | Direction (degrees) | Deviation (feet) | To Pin (feet) |
|------|------------------|---------------|------------------|------------------|------------------------|---------------------|-----------------|-----------------|---------------------|------------------|---------------|
| AVE | 262.3 | 241.9 | 153.3 | 132.2 | 9.6 | 0.9 IO | 3519 | 5 D | 0.5 L | 7.9 L | - |
| 3 | 282.0 | 260.4 | 160.0 | 120.0 | 10.3 | 0 | 3000 | 0 | 0.1 L | 1.9 L | - |
| 4 | 244.8 | 221.1 | 143.5 | 135.5 | 10.3 | 0 | 3000 | 0 | 1.3 R | 16.3 R | - |
| 5 | 241.7 | 221.6 | 138.9 | 133.7 | 14.1 | 0 | 3000 | 0 | 0.1 L | 1.9 L | - |
| 6 | 237.1 | 223.7 | 138.9 | 133.7 | 14.1 | 0 | 4092 | 0 | 1.6 R | 22.7 R | - |
| 7 | 237.1 | 223.7 | 138.9 | 133.7 | 14.1 | 0 | 4092 | 0 | 1.1 L | 14.1 L | - |
| 8 | 275.4 | 250.9 | 160.0 | 133.7 | 8.0 | 0 | 3000 | 0 | 1.1 L | 16.2 L | - |
| 9 | 274.4 | 249.7 | 160.0 | 133.7 | 8.0 | 1.1 C | 22 IO | 3000 | 1.1 L | 63.7 L | - |
| 10 | 276.0 | 250.8 | 160.0 | 133.7 | 8.0 | 1.1 C | 22 IO | 3000 | 1.1 L | 1.3 L | - |
| 11 | 276.0 | 250.8 | 160.0 | 133.7 | 8.0 | 1.1 C | 22 IO | 3000 | 1.1 L | 1.3 L | - |
| 12 | 237.2 | 237.2 | 154.5 | 140.9 | 8.0 | 1.1 C | 1.6 IO | 3000 | 0.8 L | 11.4 L | - |
| 13 | 239.1 | 239.1 | 154.5 | 140.9 | 8.0 | 1.1 C | 1.6 IO | 3139 | 0.8 L | 29.3 L | - |
| 14 | 243.1 | 243.1 | 154.5 | 140.9 | 8.0 | 1.1 C | 1.6 IO | 4993 | 0.8 L | 24.1 L | - |
| 15 | 243.1 | 243.1 | 154.5 | 140.9 | 8.0 | 1.1 C | 1.6 IO | 4993 | 0.8 R | 10.7 R | - |
| 16 | 243.1 | 243.1 | 154.5 | 120.0 | 8.0 | 1.1 C | 1.6 IO | 4993 | 0.8 R | 10.7 R | - |

 
← LEAVE PRACTICE →

THE SCORING ZONE

1. From the Main Menu, select **PRACTICE** and then **SCORING ZONE**.
-OR-
From the Practice Area, click or touch the **E6 Cube**.
2. Select **CHOOSE PRACTICE AREA**.
3. Select **SCORING ZONE**.

DISPLAY THE SCORING ZONE

1. On the Driving Range, open the drop-down menu by clicking or touching the arrow at the bottom of the Shot Statistics box.
2. Select **SCORING ZONE**. The Scoring Zone target is displayed on the driving range and in the Top View window.

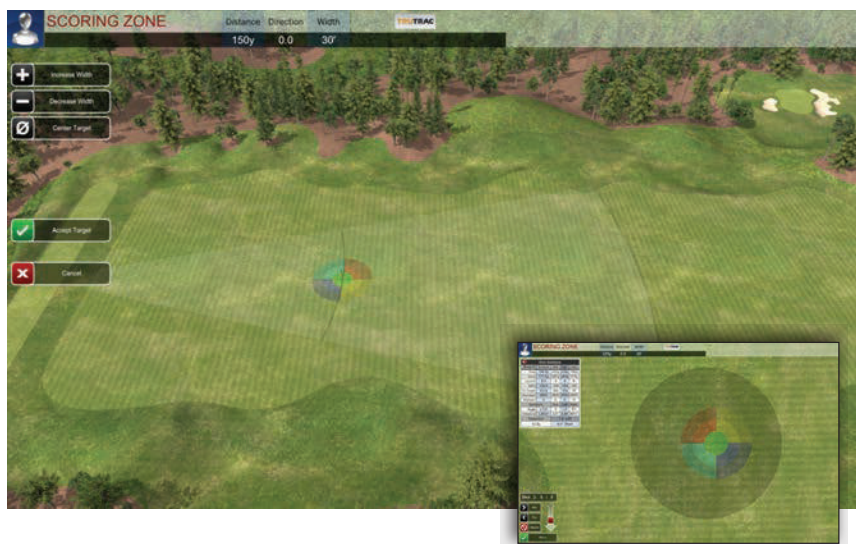

MOVE OR RESIZE THE SCORING ZONE

VIEW SHOT RESULTS

1. Open the **DROP-DOWN MENU**.
2. Select **CHANGE**. The following options are now available:
 - Increase Width: Expand the target.
 - Decrease Width: Shrink the target.
 - Center Target: Move the target to the center of the fairway.
3. To move the Target, click or touch and drag it.
4. When finished, select **ACCEPT TARGET**.

VIEW SHOT RESULTS

1. Open the **DROP-DOWN MENU**.
2. Select **VIEW**.

NOTE: The shadowed area shows the Dispersion of shots taken; the cross hairs show the Dispersion midpoint.
3. The Shot box displays the number of shots taken.
4. Select **NEXT** or **PREV** to cycle through the individual shots.
5. Click or touch **REMOVE** to delete whichever shot is highlighted.
6. Drag the slider to zoom in and out.
7. Click or touch **RETURN** to resume hitting.

EXIT THE SCORING ZONE

RETURN TO THE DRIVING RANGE

1. Open the **DROP-DOWN MENU**.
2. Select **DRIVING RANGE**.

EXIT OR SWITCH PRACTICE AREAS:

1. Click or touch the **E6 CUBE**.
2. Select **EXIT PRACTICE** to exit or **CHOOSE PRACTICE AREA** to switch Practice Areas.

CHIP & PUTT

1. From the Main Menu, select **PRACTICE** and then **CHIP & PUTT**.
–OR–
From the Practice Area, click or touch the **E6 MENU**, and then select **CHOOSE PRACTICE AREA**.
2. Select **CHIP & PUTT**.
3. Select the **FLAG** button in the top right corner.
4. Move the Flag icon to – or click/touch – where you want the hole to be.
5. Select the **BALL** button.
6. Move the Ball icon to – or click/touch – where you want to putt from.
NOTE: The distance and difference in elevation between the ball and the pin are displayed in the upper right corner.
7. Click the **CHECK MARK** button to accept the settings and start practice.
8. Click the **(X)** button to return to the last setting.



READ CHIP OR PUTT

1. Click or touch anywhere on the terrain to display the AIM MARKER & GRID.
2. Move the AIM MARKER & GRID to highlight the undulations of the terrain.
NOTE: Red indicates a downhill break, green uphill.
3. Click the **BALL** button to toggle between an elevated and ground level view.
4. In the elevated view, click **FLAG** button to toggle between a view from behind the pin and a view from behind the ball.
NOTE: While in the elevated view you can move the slider to zoom in or out.
5. To set up in a direction other than at the pin, you must be at ground level. Click or touch anywhere on the terrain to display the AIM MARKER & GRID, move it to where you want to face, and then select the **CHECK MARK** button.
NOTE: To reset view to face the pin, click or touch the terrain (to display the AIM MARKER & GRID) and then click the FLAG button.



CHANGE THE BALL AND/OR PIN POSITION

1. Click the **ARROW** at the bottom of the Shot Statistics box in the upper left corner to open the drop-down menu.
2. Select **CHANGE**.

ONLINE EVENTS

From the **MAIN MENU**, select **EVENT**.

PLAYERS

1. To add players **SELECT** one of the following options:
 - LOGIN** - If you already have created a Profile.
 - CREATE** - Create a Profile. A Player Profile is required to track your stats online and to compete in online events.
 - GUEST** - Guests *cannot* compete in online events.
2. **ADD** additional Players (8 players max)
3. To **REMOVE** a player **TAP** the **LOG OUT** icon.

 
EVENTS

NAVIGATE to the **EVENTS** screen

NOTE: There are multiple ways to navigate between screens: tap menu items, tap directional arrows, or swipe in a horizontal direction.

1. **SELECT** an **EVENT** by **TAPPING** on a row in the **LIST**.
2. **DETAILS** of the Event will be displayed automatically.

DETAILS

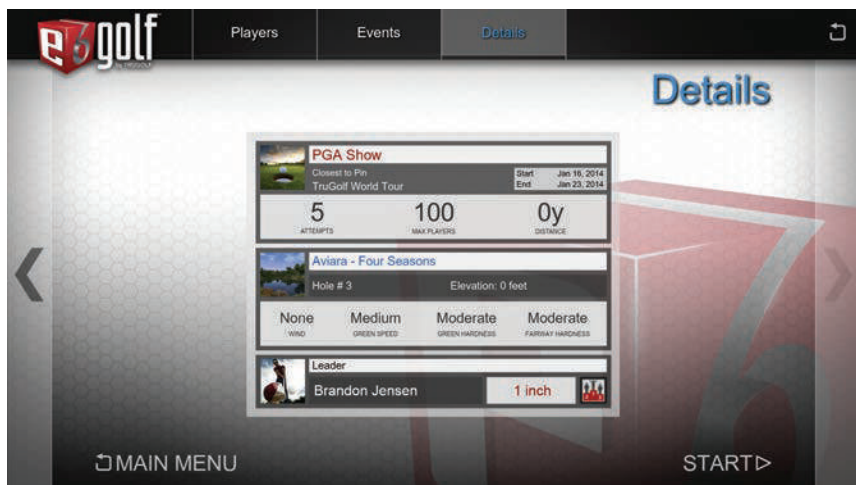



START

Select **START** to begin the EVENT.

–OR–

NAVIGATE back to EVENTS to select another EVENT.

NOTE: There are multiple ways to navigate between screens: tap menu items, tap directional arrows, or swipe in a horizontal direction.

CREATE EVENT

CREATED EVENTS ARE ONLY AVAILABLE ON YOUR LOCAL SYSTEM.

From the **MAIN MENU**, select **EVENT**.

PLAYERS

1. LOGIN
2. Navigate to EVENTS

NOTE: There are multiple ways to navigate between screens: tap menu items, tap directional arrows, or swipe in a horizontal direction.

EVENTS

1. SELECT **CREATE**.
2. SELECT the type of EVENT.
 - a. Closest to the Pin
 - b. Longest Drive
 - c. Stroke Play
3. Set the desired **OPTIONS** for the EVENT.
4. Tap **SAVE**



5. Select the **EVENT** by TAPPING on the row in the LIST.
6. **DETAILS** of the Event will be displayed automatically.
7. Select **START** to begin the EVENT.



title X

System Requirements:

i3, i5, i7 (2.0Ghz or equivalent), 4GB RAM,
25GB free hard drive space, DVD drive, Windows 7|8|10
1GB NVIDIA GTX 460 / ATI Radeon HD 6000 Series or higher



TRUGOLF 
DRIVING REALITY

E6GOLF.COM

title X

TITLEGOLF.COM