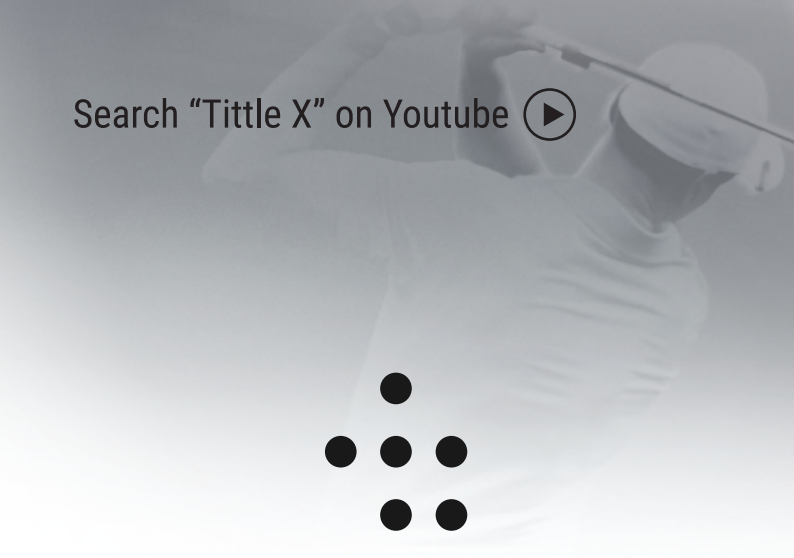

tittle X

GOLF SIMULATOR

Device Quick Start Guide

Essential Ver.

Preparing Tittle X

STEP1 Attach a cradle onto the swing stick or shaft

Attach each cradle to its corresponding club.
Please attach the cradle on the skinnier part of the shaft and push it upwards into the grip of the club.

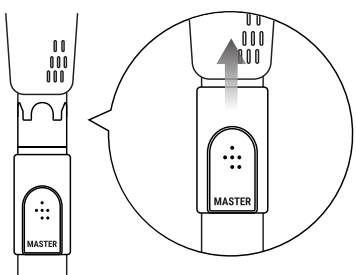

Tip!

If your golf shaft is on the skinner side or there is a lot of force in your swing, please stick the included sticker pad onto the shaft. Also, sticking the pad to the inside of the cradle will also provide stability.

Preparing Tittle X

STEP2 Insert Tittle X onto the cradle

Align the marked Tittle symbol to the cradle outline and insert until you hear a clicking sound.

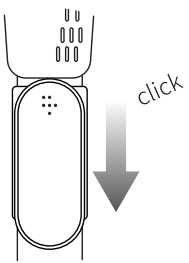

Once you attach and power on the device it will automatically recognize the club and enter the Ready Mode.
If Tittle X connects with golf simulator software, ' ' sign will be displayed.

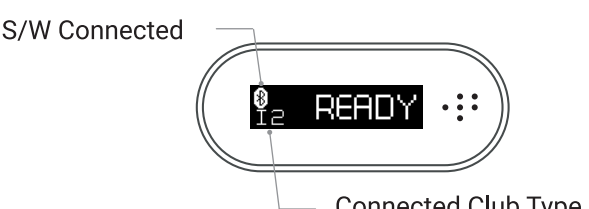

Getting Started with Tittle X

STEP1 Powering up Tittle X

Power up by tapping on the display twice.
When Tittle X is not used for over 10 minutes it will automatically go into the sleep mode.

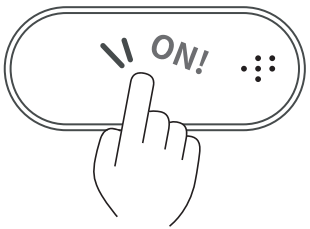

Tip!

Tittle X is delivered to you in sleep mode.
Wake up Tittle X by connecting it to a power source using the included charging cable.

Getting Started with Tittle X

STEP2 Connect with Simulator Software

How to connect Tittle X's Simulator Software :

Please visit on ***www.e6golf.com/tittle*** and download manual files.

Getting Started with Tittle X

STEP3 Swing

When you maintain the address position for over 1 full second, the Ready Mode switches to the Swing Mode. When switching to the Swing Mode Tittle X buzzes alerting you to begin your swing.

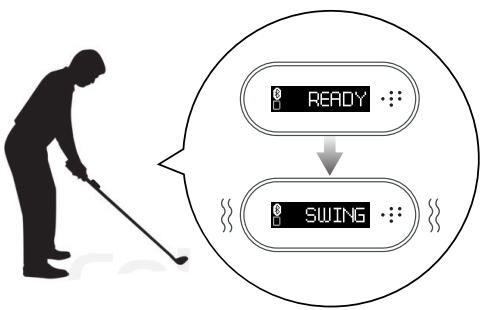

Tip!

After entering the Swing Mode, if you waggle or make other movements, a false swing is registered. Therefore, after entering the Swing Mode, try to swing as immediately as possible.

Caution and Warning

Usage & Liabilities

- **Before first use, check the battery life status**.
- Do not use the product for purposes other than its intended functions.
- Do not separate and disassemble the product.
- Do not subject the product to severe impact, such as one caused by a drop.
- Do not use unauthorized components.
- We hold no liability for information that may leak from Bluetooth communications.
- We hold no liability for damage to clubs such as scratches, spots, etc.
- Do not expose the product to severe temperature or humidity.
- Ensure there are no nearby obstacles or people when you swing.
- Remove device from the cradle after use.
- Do not use on a hard surface such as concrete or asphalt.
- Be careful not to damage your club grip when installing the cradle.

Specifications

Product Name	Tittle X Golf simulator
Display	OLED Display with 128x32 Resolution
Sensor	6-Axis MEM (microelectromechanical) sensor Hall sensor for club recognition
Battery	Lithuim Polymer 70mAh
Run Time	5 hours of continuous use
Charging Time	2 hours (Full charged)
Supported Smartphones	Android 4.3 or higher & iOS 8 or higher
Bluetooth	Bluetooth 4.0 BLE , 2.4Ghz, 1Mbps
Optimal Temperature	5~35°C

Warranty and Customer Service

- One year warranty from the date of original retail purchase.
  * No warranty against damages or loss caused by accident, abuse, or natural disasters.
- For support, please contact the following email :
  CS@ulike-creative.com
- For more details, check the Website : ***www.tittlegolf.com***

Search “Tittle X” on Youtube

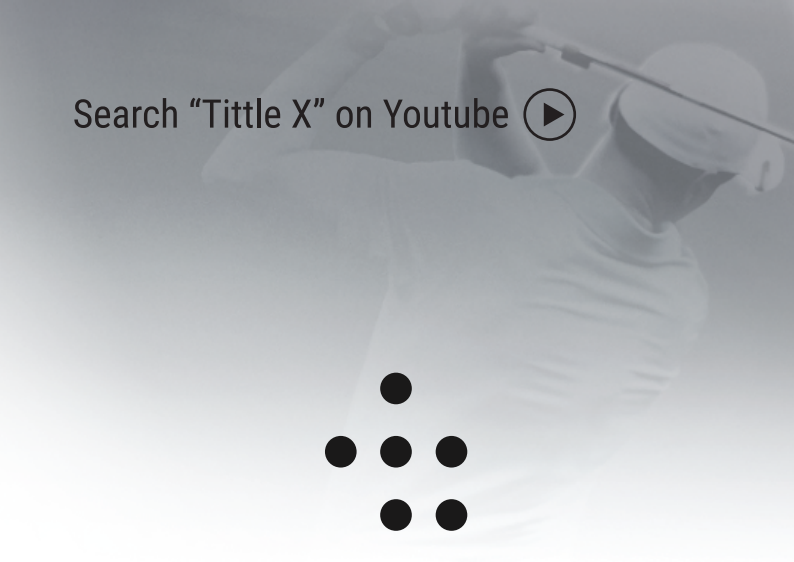

tittle X

GOLF SIMULATOR

User Guide

Essential Ver.

INSTALLATION

TITTLE X SMARTPHONE APP DOWNLOAD

1. Search “Tittle X” on APP STORE or GOOGLE PLAY.
2. Download The App.

> **NOTICE**
> The App will be automatically updated if needed.
> All customers are required to updatetheir firmware.

E6GOLF SOFTWARE DOWNLOAD

Access on https://e6golf.com/tittle, please click DOWNLOAD to receive the installation file (or see email that we sent with download address).

1. Execute 'E6_Downliad_1.6.xx.x.exe'.
2. Click NEXT button
3. Select TITTLE in the select manufacturer and click NEXT.

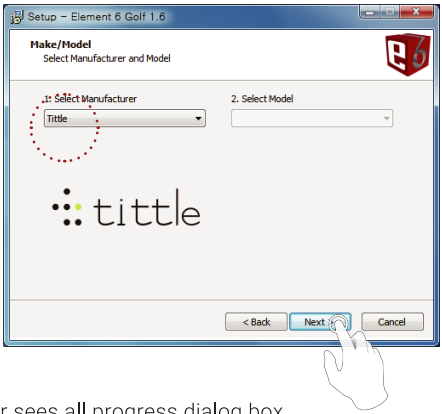

4. The user sees all progress dialog box.

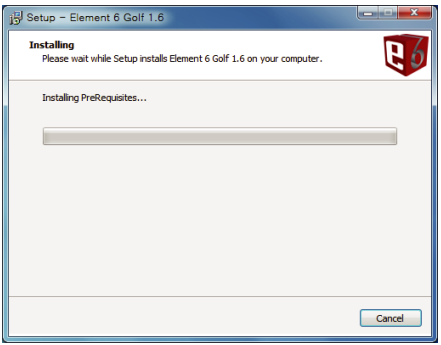

5. E6Golf Element 6 Golf 1.6 icon appears when installation is complete.

E6GOLF SOFTWARE AUTHORIZATION

1. Execute E6golf Program on the desktop.
2. Select OTHER > E6 Info.
3. Simulator ID will be displayed on this E6golf information page.

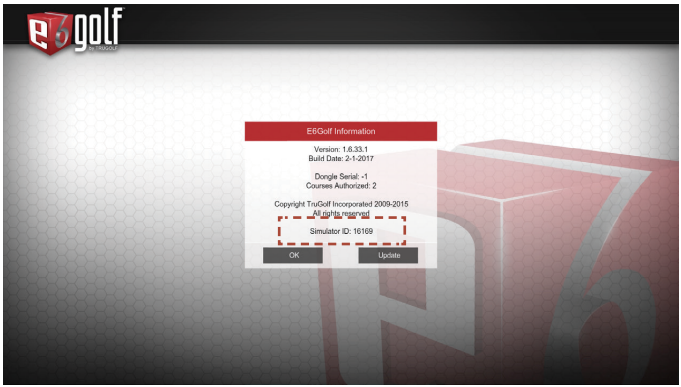

4. Access on HTTPS://E6GOLF.COM/TITTLE/AUTHORIZATION and input "NAME, EMAIL, VERIFICATION CODE AND SIMULATOR ID" and then click SUBMIT button (It will be automatically approved by TruGolf within 3 business days in max and then you can use the golf courses you got. At this time you can use one golf course for free).

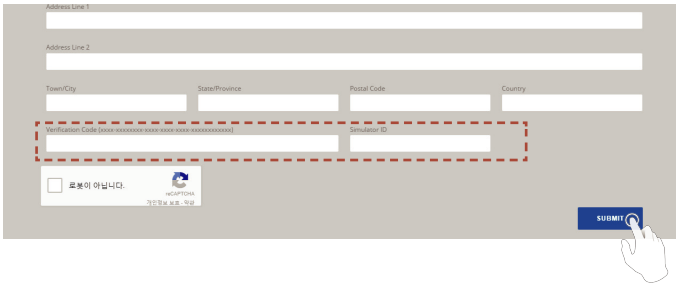

START TITTLE X

1. PC and Smartphone's WiFi must be connected to the same router.
2. Launch E6Golf.

NOTICE

E6Golf software of the PC must be executed before Tittle X's App of Smartphone.

3. Execute Tittle X's App on your Smartphone.

TIP!

The game will want to download additional data, please allow it to do so. Until Authorization is complete, you will only be able to play the Wade Hampton course.

4. Log in if you are member or Register. You can select GUEST button.
5. Place the Tittle device beside Smartphone.
   The device should automatically berecognized by the app.
   - In case of IPhone, select PAIR if requested.
   - For Android Smartphone - if disconnected, pull down the notification drawer at the top of the screen and select Pairing.

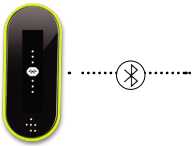

Android Phone

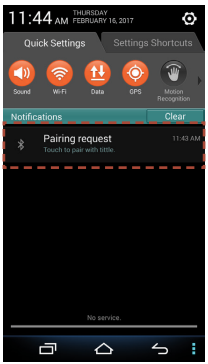

In Android Smartphone, Check NOTIFICATION.

iPhone

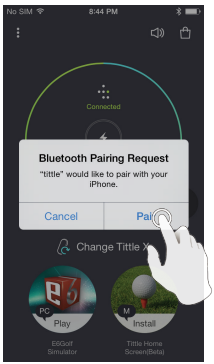

In iPhone, Select PAIR button.

6. Select E6Golf Icon at the bottom of the app. The E6Golf software on your PC and the Smartphone app will automatically connect (PC's IP address is automatically detected).

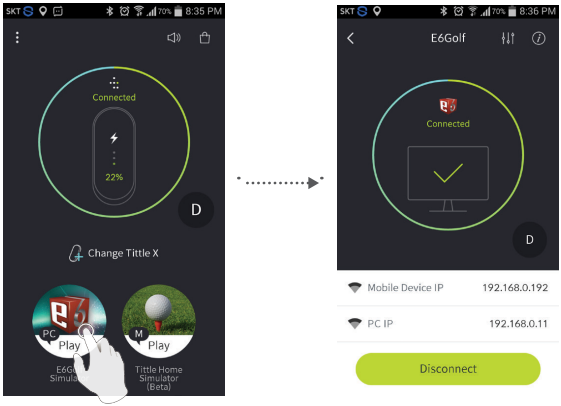

TIP!
If you see NOT CONNECTED on the screen, you must set the IP Address manually. Please check the following : Go to the PC that E6Golf installed – execute DOS Window(CMD) – Input "ipconfig"

7. Select "Play" or "Practice" Mode in the E6Golf.
8. When the Tittle Device is attached to the Swing Stick and you assume the address position, READY Mode on the device will change automatically to SWING Mode(Smartphone will sound "READY" when you're in "SWING" mode).

*Check SWING on the Screen!

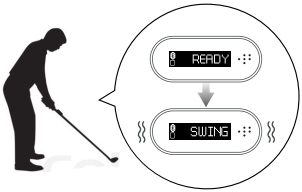

9. When you swing, the ball will fly on the screen and Swing Analysis screen is displayed.

TIP!
After entering Swing Mode, if you readjust your wrists or make other movements, swing analysis may be affected. Therefore, after entering Swing Mode, avoid making any extraneous motions before beginning your backswing (i.e. do NOT Waggle).

FOR FURTHER DETAILS,
PLEASE SEARCH "TITTLE X MANUAL" ON YOUTUBE!

TROUBLESHOOTING

DISCONNECTED SYMPTOM BETWEEN TITTLE DEVICE AND SMARTPHONE.

- Check the battery. Double tap the Tittle device screen and check if it is powered on and at what level the battery is.
- Check if there is other Tittle device around you. (If several Tittle devices are turned on at the same time, it may interfere with the connection.)
- Check Bluetooth Mark on the Tittle X's screen.
- In iPhone, you must select "Pair" in the "Bluetooth Pairing Request".
- In iPhone, if you want to change the device, you must unpair the Tittle device. (See: Setting > Bluetooth list)
- In Android if Smartphone is disconnected from Tittle device, pull down the notification drawer at the top of the screen and select PAIRING.

DISCONNECTED SYMPTOM BETWEEN SMARTPHONE(TITTLE X'S APP) AND PC(E6GOLF).

- Check if Smartphone and PC are connected to the same Router. *(Same WIFI Needed.)*
- At First it is normally connected, but sometimes the PC or Smartphone may beconnected to another WIFI temporarily. Check if smartphone and PC are connected to the same WIFI.
- E6Golf software of the PC must be executed before Tittle X's App of Smartphone.
- If you have a firewall software installed on your PC, be sure to grant permission to use E6Golf software.
- Make sure if the network share settings in the Control Panel was permitted.

SWING NOT REGISTERING ON SCREEN.

- SWING must display on the screen before swinging or Swing after hearing READY Sound from Smartphone.
- "Waggle", slow back swings or overswings will also affect the system's swing recognition